


### Type VN

Mild steel, bright zinc plated

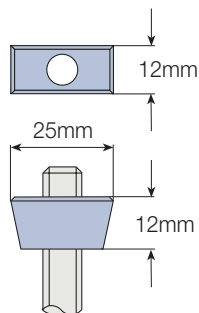


The V-Nut fits the re-entrant channel of several composite floor decking profiles including:

- Ribdeck® 51 - Structural Metal Deck (SMD®)
- ComFlor 51® - Tata Steel® Europe
- Holorib® and Superib® - Hare Decking (formerly Richard Lees Steel Decking)
- Multideck® 50 - Kingspan® Structural Products
- Metfloor® 55 - Composite Metal Flooring (CMF®)

Product Code	Rod	Safe Working Load	Tightening Torque
		(4:1 Factor of Safety)	
	4.6	Tensile / 1 Rod	Nm
		kN	
VN10	M10	2.1	10

Order example: VN10

#### Installation

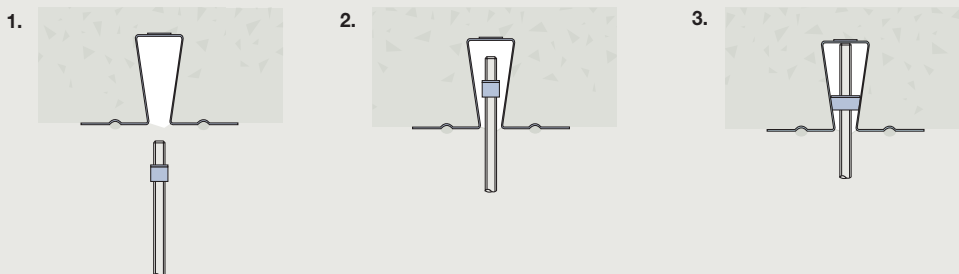

1. Screw VN onto threaded rod.
2. Insert VN and rod into re-entrant channel of decking.
3. Rotate both rod and VN through 90° so that tapered sides engage the sides of the channel.

**Note:** If the decking profile is deformed/distorted, the fixing should not be installed. If in doubt, please contact Lindapter's Technical Support Department for advice.